

Spare parts standards kits

Central&Side Module Spare Parts Kit



Filtration Module Spare Parts Kit



CENTRAL&SIDE MODULE

SPARE PARTS KITS

Part.	Description	QUANTITY									
		BLVF		BLVF HC		BLVF HC MF		BLVF TEF HC MF			
		2P	3P	5P	3P	5P	3P	5P	3P	5P	
15	Thrust washer	2	6		2	6	2	6	2	6	
• 16	Seal seat	4	6	14	6	14	6	14	6	14	
• 19	Seat o-ring	4	6	14	6	15	6	14	6	14	
* 20	O-ring	1					2				
21	Bush & Cap o-ring	2	6		2	6	2	6	2	6	
22	Gland gasket	1	3		1	3	1	3	1	3	
23	Body o-ring	4	6	10	6	10	6	10	6	10	
24	Cover o-ring	1	2		4		-		2		

SPARE PARTS KIT COMPOSITION:

BLVF series: part no. 15-16-19-21-22-23-24 for particellar version
part no. 15-16-19-20-21-22-23-24 for coalesher version

BLVF HC series: part no. 15-16-19-20-21-22-23-24

BLVF HC MF series: part no. 15-16-19-20-21-22-23

BLVF TEF HC MF series: part no. 15-16-19-20-21-22-23-24

•: Parts 16 and 19 are supplied assembled

FILTRATION MODULE

SPARE PARTS KITS

Part.	Description	QUANTITY									
		BLVF		BLVF HC		BLVF HC MF		BLVF TEF HC MF			
		2P	3P	5P	3P	5P	3P	5P	3P	5P	
* 20	O-ring	1					2				
24	O-ring	1	2		-		-		2		
26	Filter cartridge	1					2				
** 32	O-ring		-		2		-		-		
** 36	O-ring		-		2		-		-		
*** 37	O-ring		-				-			4	

SPARE PARTS KIT COMPOSITION:

BLVF series: part no. 24-26 for particellar version
part no. 20-24-26 for coalesher version

BLVF HC series: part no. 20-26-32-36

BLVF HC MF series: part no. 20-26

BLVF TEF HC MF series: part no. 24-26-37

*: This gasket does not exist for particellar version **: Only for BLVF-HC Series

***: Only for BLVF-TEF-HC-MF series